



EXCELSIOR-HENDERSON™ MOTORCYCLES

ECU TROUBLE CODES: Sorted by Code Number

- P0105 Barometric Pressure Sensor Fault
- P0112 Air Temperature Sensor Short to Ground
- P0113 Air Temp Sensor Open Circuit/Short to Power
- P0117 Engine Temperature Sensor Short to Ground
- P0118 Engine Temp Sensor Open Circuit/Short to Power
- P0119 Engine Temperature Sensor Voltage High
- P0122 Throttle Position Sensor Low Input Voltage
- P0123 Throttle Position Sensor High Input Voltage
- P0170 Air/Fuel Feedback Fault
- P0201 Injector 1 Circuit Fault
- P0202 Injector 2 Circuit Fault
- P0230 Fuel Pump Primary Circuit Malfunction
- P0335 Crankshaft Sensor Circuit Fault
- P0351 Ignition Coil 1 Circuit Fault
- P0352 Ignition Coil 2 Circuit Fault
- P0444 Purge Valve Open Circuit/Short to Ground
- P0445 Purge Valve Short to +12V
- P0500 Road Speed Sensor Circuit Fault
- P0505 IACV Stepper Motor/Circuit Fault
- P0560 System Power Circuit Fault
- P0562 Low System Voltage
- P0563 High System Voltage
- P1171 Air/Fuel Feedback Maximum Rich
- P1172 Air/Fuel Feedback Maximum Lean
- P1178 Air/Fuel Feedback Maximum Air Leakage Adaption
- P1179 Air/Fuel Feedback Minimum Air Leakage Adaption
- P1201 Injector 1 Open Circuit/Short to Ground
- P1202 Injector 2 Open Circuit/Short to Ground
- P1205 Injector 1 Short to +12V
- P1206 Injector 2 Short to +12V
- P1231 Fuel Pump Open Circuit/Short to Ground
- P1232 Fuel Pump Short to +12V
- P1335 Crankshaft Sensor Signal Fault
- P1352 Ignition Coil 1 Open Circuit/Short to Ground
- P1353 Ignition Coil 2 Open Circuit/Short to Ground
- P1355 Ignition Coil 1 Short to +12V
- P1356 Ignition Coil 2 Short to +12V
- P1385 Tachometer Circuit Fault
- P1386 Tachometer Open Circuit/Short to Ground
- P1560 Sensor Supply Voltage Circuit Fault
- P1600 Check Engine Lamp Circuit Fault
- P1601 Check Engine Lamp Open Circuit/Short to Ground
- P1602 Check Engine Lamp Short to +12V



EXCELSIOR-HENDERSON™ MOTORCYCLES

ECU TROUBLE CODES: Sorted by Description

- P0113 Air Temp Sensor Open Circuit/Short to Power
- P0112 Air Temperature Sensor Short to Ground
- P0170 Air/Fuel Feedback Fault
- P1178 Air/Fuel Feedback Maximum Air Leakage Adaption
- P1172 Air/Fuel Feedback Maximum Lean
- P1171 Air/Fuel Feedback Maximum Rich
- P1179 Air/Fuel Feedback Minimum Air Leakage Adaption
- P0105 Barometric Pressure Sensor Fault
- P1600 Check Engine Lamp Circuit Fault
- P1601 Check Engine Lamp Open Circuit/Short to Ground
- P1602 Check Engine Lamp Short to +12V
- P0335 Crankshaft Sensor Circuit Fault
- P1335 Crankshaft Sensor Signal Fault
- P0118 Engine Temp Sensor Open Circuit/Short to Power
- P0117 Engine Temperature Sensor Short to Ground
- P0119 Engine Temperature Sensor Voltage High
- P1231 Fuel Pump Open Circuit/Short to Ground
- P0230 Fuel Pump Primary Circuit Malfunction
- P1232 Fuel Pump Short to +12V
- P0563 High System Voltage
- P0505 IACV Stepper Motor/Circuit Fault
- P0351 Ignition Coil 1 Circuit Fault
- P1352 Ignition Coil 1 Open Circuit/Short to Ground
- P1355 Ignition Coil 1 Short to +12V
- P0352 Ignition Coil 2 Circuit Fault
- P1353 Ignition Coil 2 Open Circuit/Short to Ground
- P1356 Ignition Coil 2 Short to +12V
- P0201 Injector 1 Circuit Fault
- P1201 Injector 1 Open Circuit/Short to Ground
- P1205 Injector 1 Short to +12V
- P0202 Injector 2 Circuit Fault
- P1202 Injector 2 Open Circuit/Short to Ground
- P1206 Injector 2 Short to +12V
- P0562 Low System Voltage
- P0444 Purge Valve Open Circuit/Short to Ground
- P0445 Purge Valve Short to +12V
- P0500 Road Speed Sensor Circuit Fault
- P1560 Sensor Supply Voltage Circuit Fault
- P0560 System Power Circuit Fault
- P1385 Tachometer Circuit Fault
- P1386 Tachometer Open Circuit/Short to Ground
- P0123 Throttle Position Sensor High Input Voltage
- P0122 Throttle Position Sensor Low Input Voltage